

# INSTALLATION PROCEDURE FOR TRUVISION WIPER ARM AND BLADE

1. Install wiper arm by removing the plastic head cover and position the wiper arm to the Lock-Back position. (*See Illustration # 3*) Slide the wiper arm onto the pivot shaft and install the 10mm washer & lock nut hand tight. Adjust the wiper arm to the working position and locate to the desired park position. **Torque 10mm nut to 10 ft. lbs.** Position wiper arm and blade to the "Lock-back" position and **continue torque procedure 35ft. lbs.** Return wiper arm and blade to the working position. Re-install plastic head cover and repeat procedure on opposite side.

ILLUSTRATION #3



## Important Procedure -

2. Re-torque 10mm pivot nut to 35 ft. lbs. 30 minutes after initial installation.
3. Install wiper blade to wiper arm by first rotating the J-Hook adapter approximately 45 degrees. Slide the wiper arm through the wiper blade frame until the arm hook clears the J-Hook adapter. Push the wiper blade & adapter forward until the locking tab on the adapter engages the locking cavity located in the wiper arm. Repeat process on the opposite side. (*See Illustration # 4*)

ILLUSTRATION #4

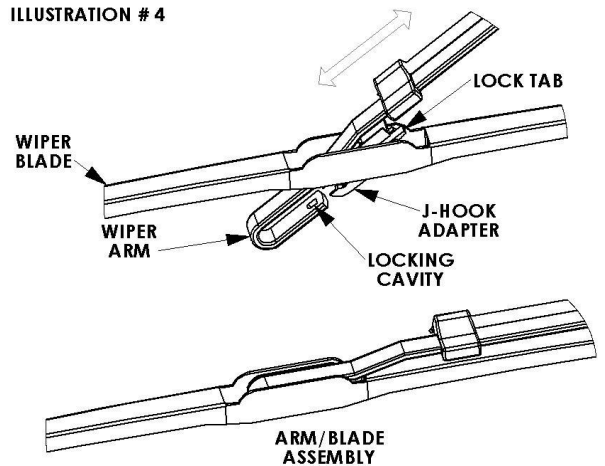


ILLUSTRATION #1

