

# Sprague Wiper Arm Conversion

## Passenger/Driver

**1. Tools Needed:**  
Pliers  
Flat Head Screw  
Driver



**2. Remove  
screw with  
pliers and flat  
head screw  
driver**



**3. Leave spray  
nozzle loose**




**4. Swing  
secondary arm  
over top and  
around to the  
other side**



**5.**



**6.**

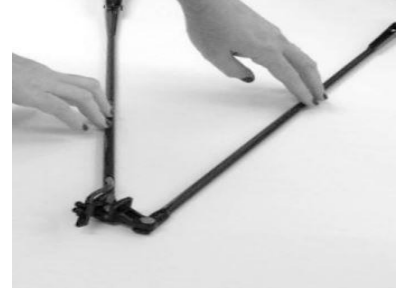

**7. Reattach  
spray nozzle  
with nut and  
bolt**



**8.**



**9. Tighten nut  
and bolt with  
pliers and flat  
head screw  
driver**



**10. Complete**

